



**BUREAU
VERITAS**

Technical Report: 96252690801
Date Received: SEPTEMBER 26, 2025

OCTOBER 02, 2025
Page 1 of 17

CONG TY TNHH TM SX XNK HUNG GIA PHAT
THUA DAT SO 65, 80, TO BAN DO SO 67, AP BINH CO, PHUONG BINH CO, TP. HO CHI MINH

Sample Description:	TWIN OVER FULL BUNK BED WITH STORAGE		
Vendor:	CONG TY TNHH TM SX XNK HUNG GIA PHAT	Sample Size:	/
Manufacturer:	CONG TY TNHH TM SX XNK HUNG GIA PHAT	VPN:	/
Buyer:	GIGACLOUD TECHNOLOGY(USA) INC	SKN/SKU No.:	/
Agent:	/		/
Labeled Age Grade:	/	PO No.:	V376TMS20250425KV
Appropriate Age Grade:	/	Ref #:	/
Client Specified Age Grade:	/	Country of Origin:	VIET NAM
Tested Age Grade:	/	Assortment No.:	/
UPC Code:	/	Department No.:	/
Phase of Production:	/	Item#:	/
Color:	WHITE	Date of Production:	/
Program:	/	Model/Style#:	N820P302158K/ N820P302159K/ N820P302160K
Previous No:	96252590081 & 96251480461	Country of Destination:	USA

TEST PROPERTY	PASS	FAIL	DATA	N/A	Remark
CPSIA Total lead content in Surface Coating	X				
CPSIA Total Lead Content In Substrate Materials	X				
15 U.S.C 1278a Total Lead Content	X				
16 CFR 1213 Bunk Beds	X				
16 CFR 1513 Requirements for Bunk Beds	X				
ASTM F1427-21e1 Bunk Beds	X				

Note(s):

- This report includes the test result(s) which was conducted & reviewed by Analytical department.
- **Recommend to revise the thickness of mattress in Upper bunk into “6” Max” to match with Carton and Warning Label (Please see figure 1)**



CONG TY TNHH TM SX XNK HUNG GIA PHAT
Technical Report: 96252690801
OCTOBER 02, 2025
Page 2 of 17

If there is any question regarding this report, please contact the following lab personnel:

Administrative inquiries, please contact:

Primary Contact: Elise Vo, Tel: 84-028-37421-604 ~ 6, Ext: 394; email: elise.vo@bureauveritas.com
Back-up Contact: Cynthia Vuong, Tel: 848-37421-604 ~ 6, Ext: 641; email: cynthia.vuong@bureauveritas.com

Technical inquiries, please contact:

Primary Contact: Terry Nguyen, Tel: 84-028-37421-604 ~ 6, Ext: 355; email: terry.nguyen@bureauveritas.com
Back-up Contact: Louis Tran, Tel: 84-028-37421-604 ~ 6, Ext: 339; email: louis.tran@bureauveritas.com

BUREAU VERITAS CONSUMER PRODUCTS SERVICES (VN) LTD.

TERRY NGUYEN
LAB MANAGER – HARDLINE, TOYS & JUVENILE PRODUCTS DIVISION

SAMPLE DESCRIPTION ASSIGNED BY LABORATORY

Test Item(s)	Sample description/ Location	Material	Style(s)
I001	White Coating (Wood)	Coating	–
I002	Brown Coating (Wood)	Coating	–
I003	Coating (Side Drawer)	Coating	–
I004	Coating (Slat)	Coating	–
I005	Coating (Brown Glide)	Coating	–
I006	Brown Plastic Wheel (Glide)	Hard Plastic	–
I007	Brown Plastic Roller Catch	Hard Plastic	–
I008	White Plastic Wheel	Hard Plastic	–
I009	Plywood	Wood	–
I010	MDF	Wood	–
I011	Brown Glide	Metal	–
I012	Yellow Hinge	Metal	–
I013	Yellow Metal Part Of Caster	Metal	–
I014	Rivet Of Caster	Metal	–
I015	Metal Door Catch	Metal	–
I016	Yellow Bolt	Metal	–
I017	Silver Bolt	Metal	–
I018	Yellow Corner Bracket	Metal	–
I019	Silver Mending Plate	Metal	–
I020	Silver Knob Bolt	Metal	–
I021	Silver Round Head Screw	Metal	–
I022	Silver Flat Head Screw	Metal	–
I023	Yellow Round Head Screw	Metal	–
I024	Yellow Flat Head Screw	Metal	–
I025	Black Flat Head Screw	Metal	–
I026	Silver Barrel Nut	Metal	–
I027	Yellow Barrel Nut	Metal	–
I028	Coating (Yellow Warning Label)	Coating	–
I029	Coating (Maximum Weight Label)	Coating	–
I030	Coating (Tracking Label)	Coating	–
I031	Coating (Caprop65 Warning Label)	Coating	–
I032	Coating (COO Label)	Coating	–

TEST RESULT

Total Lead Content in Surface Coating
- United States Consumer Product Safety Improvement Act (CPSIA) of 2008, Section 101(a)(2) / United States Code of Federal Regulations (CFR), Title 16, Part 1303

Test Method : U. S. CPSC-CH-E1003-09.1 (February 25, 2011).

Maximum Allowable Limit:		90 mg/kg			
-	Unit	Result			
Test Item(s)	-	I001+I002+I005	I003+I004	I028+I029+I030	I031+I032
Parameter	-	-	-	-	-
Total Lead (Pb)	mg/kg	ND	-	ND	ND
Conclusion	-	PASS	NA	PASS	PASS

Note / Key:

ND = Not detected NA = Not applicable ">" = Greater than
 mg/kg = milligram(s) per kilogram = ppm = part(s) per million
 Reporting Limit (mg/kg): 10

Remark:

- Component(s) in Test Item(s) may not able to be tested individually due to overlapping.

TEST RESULT

Total Lead Content in Substrate:
- United States Consumer Product Safety Improvement Act (CPSIA) Section 101(a)(2)

Test Method : U. S. CPSC Test Method CPSC-CH-E1001-08.3 (November 15, 2012) or U. S. CPSC Test Method CPSC-CH-E1002-08.3 (November 15, 2012).

Maximum Allowable Limit :	100 mg/kg
----------------------------------	------------------

-	Unit	Result				
Test Item(s)	-	I006+I007+I008	I009+I010	I011	I012	I013
Parameter	-	-	-	-	-	-
Total Lead (Pb)	mg/kg	ND	ND	ND	ND	ND
Conclusion	-	PASS	PASS	PASS	PASS	PASS

-	Unit	Result				
Test Item(s)	-	I014	I015	I016	I017	I018
Parameter	-	-	-	-	-	-
Total Lead (Pb)	mg/kg	ND	ND	ND	ND	ND
Conclusion	-	PASS	PASS	PASS	PASS	PASS

-	Unit	Result				
Test Item(s)	-	I019	I020	I021	I022	I023
Parameter	-	-	-	-	-	-
Total Lead (Pb)	mg/kg	ND	ND	ND	ND	ND
Conclusion	-	PASS	PASS	PASS	PASS	PASS

-	Unit	Result				
Test Item(s)	-	I024	I025	I026	I027	
Parameter	-	-	-	-	-	-
Total Lead (Pb)	mg/kg	ND	ND	ND	ND	ND
Conclusion	-	PASS	PASS	PASS	PASS	PASS

Note / Key :

ND = Not detected NA = Not applicable ">" = Greater than
 mg/kg = milligram(s) per kilogram = ppm = part(s) per million 10000 mg/kg = 1 % % = percent
 Reporting Limit (mg/kg) : 10



Remark :

- According to Children's Products Containing Lead; Exemptions for Certain Electronic Devices; Final Rule, exemption were granted to steel alloy containing up to 0.35 % lead by weight, aluminum containing up to 0.4 % lead by weight and copper-based alloy containing up to 4 % lead by weight.
 - According to Petition Requesting Exception from Lead Content Limits; Notice Granting Exception, exemption was granted to certain aluminum alloy on certain ride-on children`s products containing up to 0.03 % lead weight.
-

TEST RESULT

**Total Lead Content:
 15 U.S.C 1278a-Children Product Containing Lead**

Maximum Allowable Limit :	100 mg/kg
----------------------------------	------------------

-	Unit	Result			
Test Item(s)	-	I001+I002+I005	I003+I004	I028+I029+I030	I031+I032
Parameter	-	-	-	-	-
Total Lead (Pb)	mg/kg	ND	-	ND	ND
Conclusion	-	PASS	NA	PASS	PASS

-	Unit	Result				
Test Item(s)	-	I006+I007+I008	I009+I010	I011	I012	I013
Parameter	-	-	-	-	-	-
Total Lead (Pb)	mg/kg	ND	ND	ND	ND	ND
Conclusion	-	PASS	PASS	PASS	PASS	PASS

-	Unit	Result				
Test Item(s)	-	I014	I015	I016	I017	I018
Parameter	-	-	-	-	-	-
Total Lead (Pb)	mg/kg	ND	ND	ND	ND	ND
Conclusion	-	PASS	PASS	PASS	PASS	PASS

-	Unit	Result				
Test Item(s)	-	I019	I020	I021	I022	I023
Parameter	-	-	-	-	-	-
Total Lead (Pb)	mg/kg	ND	ND	ND	ND	ND
Conclusion	-	PASS	PASS	PASS	PASS	PASS

-	Unit	Result			
Test Item(s)	-	I024	I025	I026	I027
Parameter	-	-	-	-	-
Total Lead (Pb)	mg/kg	ND	ND	ND	ND
Conclusion	-	PASS	PASS	PASS	PASS

Note / Key :

ND = Not detected NA = Not applicable ">" = Greater than
 mg/kg = milligram(s) per kilogram = ppm = part(s) per million 10000 mg/kg = 1 % % = percent
 Reporting Limit (mg/kg) : 10

Remark :

- Tested per client's request



RESULT(S):

REQUIREMENTS FOR BUNK BEDS (FHSA, Title 16, CFR, Part 1213 & 1513)

Section	Description	Results
1213.3 1513.3	Requirements	
1213.3(a) 1513.3(a)	Guardrails	
1213.3(a)(1) 1513.3(a)(1)	Two guardrails required if bed is > 30 inches from ground	M
1213.3(a)(2) 1513.3(a)(2)	One guardrail shall be continuous	M
1213.3(a)(3) 1513.3(a)(3)	No greater than 15 inches between either end	M
1213.3(a)(4) 1513.3(a)(4)	Bunk Beds with ladder, continuous guardrail on other side	M
1213.3(a)(5) 1513.3(a)(5)	Guardrails attached so they cannot be removed without releasing a device	M
1213.3(a)(6) 1513.3(a)(6)	The upper edge shall be no less than 5 inches above top surface	M
1213.3(a)(7) 1513.3(a)(7)	No openings in the structure between lower edge and underside	M
1213.3(b) 1513.3(b)	Bed End Structures	
1213.3(b)(1) 1513.3(b)(1)	The upper edge of end structure shall be at least 5 inches above mattress	M
1213.3(b)(2) 1513.3(b)(2)	No openings in the structure above foundation of the upper bunk that permits passage of the wedge block	M
1213.3(b)(3) 1513.3(b)(3)	Tested in accordance with Section 1213.4(c)	M
1213.3(b)(4) 1513.3(b)(4)	Neck entrapment requirements of Section 1213.4(c)(3)	M
1213.5 1513.5	Marking and Labeling	
1213.5(a) 1513.5(a)	Permanent label with name and address, model # and date code	M
1213.5(b) 1513.5(b)	Permanent Warning Label placement	M
1213.6 1513.6	Instructions	
1213.6(a) 1513.6(a)	Size of mattress and foundation	M
1213.6(b) 1513.6(b)	Safety Warning	-
1213.6(b)(1) 1513.6(b)(1)	Do not allow children under 6 years of age to use the upper bunk	M



REQUIREMENTS FOR BUNK BEDS (FHSA, Title 16, CFR, Part 1213 & 1513)

Section	Description	Results
1213.6(b)(2) 1513.6(b)(2)	Use guardrails on both sides of the upper bunk	M
1213.6(b)(3) 1513.6(b)(3)	Prohibit horseplay on or under beds	M
1213.6(b)(4) 1513.6(b)(4)	Prohibit more than one person on upper bunk	M
1213.6(b)(5) 1513.6(b)(5)	Use ladder for entering or leaving upper bunk	M
1213.6(b)(6) 1513.6(b)(6)	If the bed is placed against a wall, use full length guardrail along wall	M

M = Meet NM = Not Meet NA = Not Applicable R = Refer to Comment Section

RESULT(S):


STANDARD CONSUMER SAFETY SPECIFICATION FOR BUNK BEDS (ASTM F1427-21e1)

Section	Requirement	Result
4	Performance Requirements	
4.1	Vertical Protrusions	-
4.1.1	Vertical protrusions along the top inside surface	M
4.1.2	Cap used along the top surface of upper bunk	M
4.2	Fit of Top Bed to Bottom Bed	M
4.3	Mattress and Foundation Size and Fit (Top Bed)	M
4.4	Mattress Size and Fit (Lower Foundation)	M
4.5	Upper and Lower Foundation Support Systems	-
4.5.1	Horizontal position of the mattress and the foundation	M
4.5.2	Utilized event cross-members	M
4.5.3	Release of positive fastening devices or use of hand tools	M
4.5.4	Static load for the foundation support system	M
4.6	Side Rails	-
4.6.1	Bolt-On Side Rails	M
4.6.2	Hook-On Side Rails	NA
4.6.3	Side rail attachments	M
4.7	Guardrails	-
4.7.1	Presence of guardrails	M
4.7.2	Requirement of attachment	M
4.7.3	Requirement of height of the upper edge above the sleeping surface	M
4.7.4	Opening of the guardrail	M
4.7.5	Opening between the either end of the guardrail and the bed end structure	M
4.8	Bed Structure	-
4.8.1	The upper edge of the upper bunk end structures	M
4.8.2	Openings in the rigid end structures of the upper bunk	M
4.8.3	Openings in the end structures of the lower bunk	M
4.8.4	Neck entrapment requirement of all portions of the boundary of any opening of the lower bunk end structure	M
4.9	Ladders	-
4.9.1	Presence of ladder	M
4.9.2	Dimension requirement of ladder	M
4.9.3	Openings between ladder step and upper bunk boundary	M
4.9.4	Gaps between edge of mattress and interior vertical stile	M
4.10	Metal beds: frame and fastenings	NA
6	Marking and Labeling	M
7	Instructional Literature	M

M = Meet NM = Not Meet NA = Not Applicable R = Refer to Comment Section



CARTON LAYOUT - N820P302158K

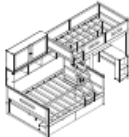	 NE PAS COUPER AVEC UN COUTEAU/UNTIL POINTS DO NOT CUT OPEN WITH SHARP KNIFE/TOOL MADE IN VIETNAM/FABRIQUE EN VIETNAM P. NO. P.O. NUMERO: V37MTW30202425K MEASURES: 48.07x36.9x25 INCH NW: 106.5 LBS GW: 113.1 LBS COLOR/COULEUR: WHITE/BLANC QTY/OTE: 1PC N820P302158K	220
	ITEM : TWIN OVER FULL BUNK BED W DESK-WHITE ARTICLE : LIT SUPERPOSE DEUX PLACES AVEC BUREAU-BLANC N820P302158K BOX : 1 OF 3 ENCADRE: 1 DE 3   WARNING To help prevent serious or fatal injuries from entrapment or falls: - Use guardrails on both sides of upper bunk. - Prohibit hanging on or under bed (s). - Prohibit more than one person on upper bunk. - Use ladder for entering and leaving upper bunk. - Strangulation Hazard - Never attach or hang items to any part of the bunk bed that are not designed for use with the bed for example, but not limited, hooks, belts and jump ropes. Never allow a child under 6 years on upper bunk. Use only mattress that is 75 long and 38" wide on upper bunk. Ensure thickness of mattress does not exceed 6". And that mattress surface is at least 5" below upper edge of guardrails. DO NOT REMOVE THIS LABEL You must read and understand the assembly instruction sheet packed in the carton before you start to assemble. Vous devez lire et comprendre la fiche d'instructions de montage emballée dans le carton avant de commencer l'assemblage. Sets often ship in multiple boxes and may arrive a day or two a part. Les ensembles sont souvent expédiés dans plusieurs boîtes et peuvent arriver à un jour ou deux d'intervalle. 	530
	N820P302158K QTY/OTE: 1PC COLOR/COULEUR: WHITE/BLANC GW.: 113.1 LBS NW.: 106.5 LBS WARNING To help prevent serious or fatal injuries from entrapment or falls: - Use guardrails on both sides of upper bunk. - Prohibit hanging on or under bed (s). - Prohibit more than one person on upper bunk. - Use ladder for entering and leaving upper bunk. - Strangulation Hazard - Never attach or hang items to any part of the bunk bed that are not designed for use with the bed for example, but not limited, hooks, belts and jump ropes. Never allow a child under 6 years on upper bunk. Use only mattress that is 75 long and 38" wide on upper bunk. Ensure thickness of mattress does not exceed 6". And that mattress surface is at least 5" below upper edge of guardrails. DO NOT REMOVE THIS LABEL 	220



CARTON LAYOUT - N820P302159K

		180
	ITEM : TWIN OVER FULL BUNK BED W DESK-WHITE ARTICLE : LIT SUPERPOSE DEUX PLACES AVEC BUREAU-BLANC N820P302159K BOX : 2 OF 3 ENCADRE: 2 DE 3 WARNING To help prevent serious or fatal injuries from entrapment or falls: - Use guardrails on both sides of upper bunk. - Prohibit horseplay on or under bed (s). - Prohibit more than one person on upper bunk. - Use ladder for entering and leaving upper bunk. Strangulation Hazard - Never attach or hang items to any part of the bunk bed that are not designed for use with the bed for example, but not limited, hooks, belts and jump ropes. DO NOT REMOVE THIS LABEL	3 / U
	N820P302159K QTY/GTE: 1/PC COLOR/COLOR: WHITE/BLANC NW: 155.5 LBS WARNING To help prevent serious or fatal injuries from entrapment or falls: - Use guardrails on both sides of upper bunk. - Prohibit horseplay on or under bed (s). - Prohibit more than one person on upper bunk. - Use ladder for entering and leaving upper bunk. Strangulation Hazard - Never attach or hang items to any part of the bunk bed that are not designed for use with the bed for example, but not limited, hooks, belts and jump ropes. DO NOT REMOVE THIS LABEL	180

CARTON LAYOUT - N820P302160K

175

630

175

A vertical strip containing a red arrow pointing up, a barcode, and several safety icons: a triangle with an exclamation mark, a person icon, a box icon, and a truck icon.

N820P302160K
QTY/QTE: 1PC
COLOR/COULEUR: WHITE/BLANC
GW.: 119.2 LBS
NW.: 110.9 LBS

A horizontal strip containing a red arrow pointing up, a barcode, and several safety icons: a triangle with an exclamation mark, a person icon, a box icon, and a truck icon.

N820P302160K
QTY/QTE: 1PC
COLOR/COULEUR: WHITE/BLANC
GW.: 119.2 LBS
NW.: 110.9 LBS

An isometric line drawing of the bed frame, showing its two-level bunk design, side rails, and integrated storage drawers at the foot of the bed.

A standard linear barcode followed by a square QR code, both used for product identification and tracking.

N820P302160K

A set of three small rectangular labels providing additional information: one with a warning symbol, one with assembly steps, and one with contact details.

MEAS/MESURES: 57.67"x24.01"x4.40 INCH
P.O.NO./P.O. NUMERO : VNTTMS202502SKV
MADE IN VIETNAM/FAIT AU VIETNAM
 DO NOT CUT OPEN WITH SHARP KNIFE/TOOL.
NE PAS COUPER AVEC UN COUTEAU/UN POINTU

ITEM : TWIN OVER FULL BUNK BED w DESK-WHITE
ARTICLE : LIT SUPERPOSÉ DEUX PLACES AVEC BUREAU-BLANC
N820P302160K
BOX : 3 OF 3
ENCADRE: 3 DE 3




You must read and understand the assembly instruction sheet packed in the carton before you start to assemble.
Vous devez lire et comprendre la fiche d'instructions de montage emballée dans le carton avant de commencer l'assemblage.
Sals often ship to multiple houses and may arrive a day or two apart.
Les assemblages sont souvent expédiés dans plusieurs boîtes et peuvent arriver à un jour ou deux d'intervalle.

A vertical strip containing a red arrow pointing up, a barcode, a QR code, and several safety icons: a triangle with an exclamation mark, a person icon, a box icon, and a truck icon.

A vertical strip containing a red arrow pointing up, a barcode, and several safety icons: a triangle with an exclamation mark, a person icon, a box icon, and a truck icon.



TRACKING LABEL

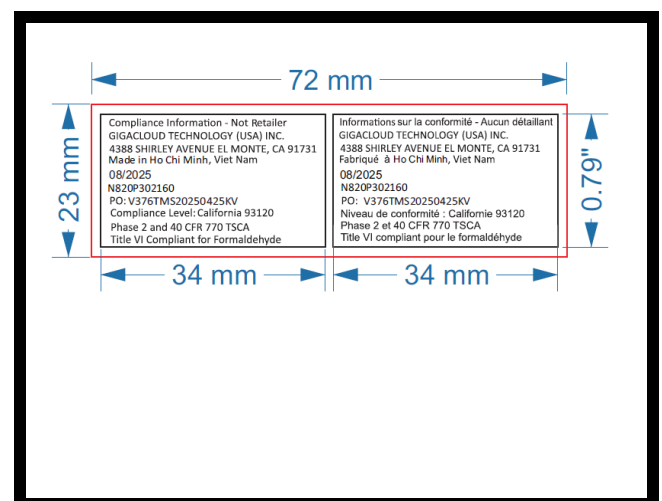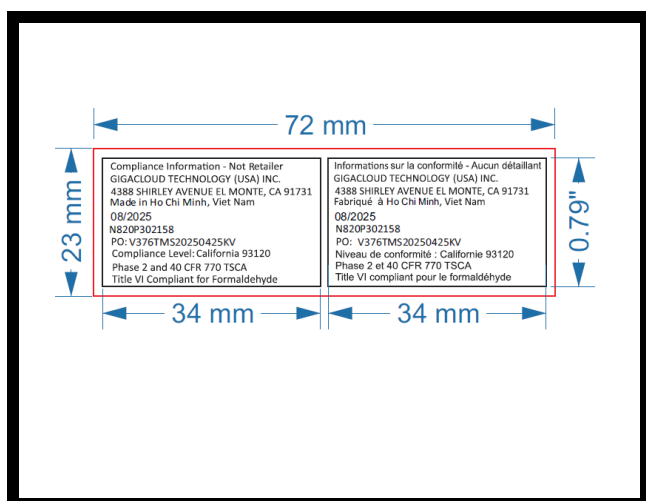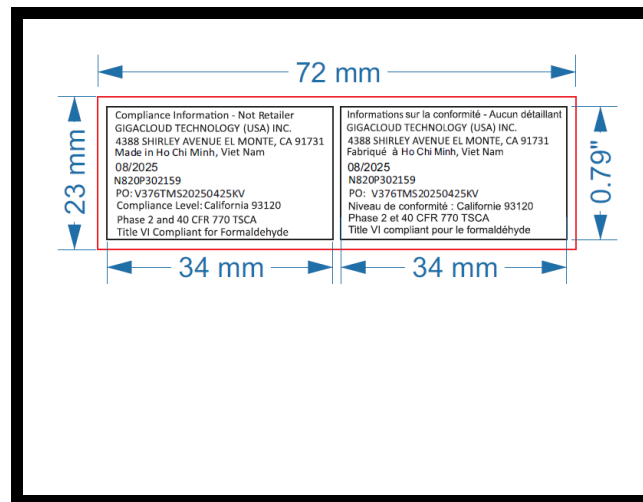

WARNING LABEL



FIGURE 1



SAFETY WARNING



1. This bed is designed for use only mattress (es) meeting the following specifications on the upper bunk, and lower bunk:

Upper bed			
Bed type	Length	Width	Thickness
Twin Standard	75"	38"	6"
Under bed			
Bed type	Length	Width	Thickness
Full Standard	75"	53 1/2"	6"